

Rear Seat Backrest (76.70.38)

Removal


1. Remove the rear seat cushion.
For additional information, refer to [Rear Seat Cushion \(76.70.37\)](#)
2. Fully extend the rear center safety belt.



3. **NOTE:**
Right-hand shown, left-hand similar.

Detach the rear seat backrest.

- 1) Release the rear seat backrest retaining clip.
- 2) Detach the rear seat backrest.

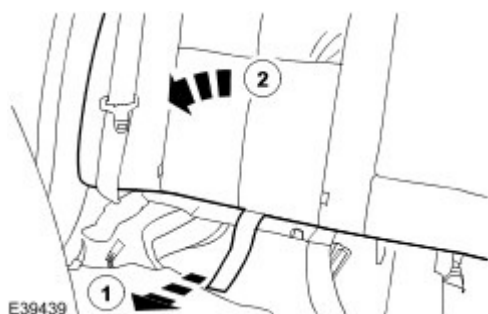

4. Remove the rear seat backrest.



Installation

1. **NOTE:**
Make sure the rear seat backrest pivot bracket inserts are correctly installed.

NOTE:

Install new rear seat backrest pivot bracket inserts if they are damaged.

To install, reverse the removal procedure.