


## Rear Seat Cushion (76.70.37)

### Removal

- 1 . Detach the rear seat cushion.

▶ Release the rear seat cushion retaining clips.

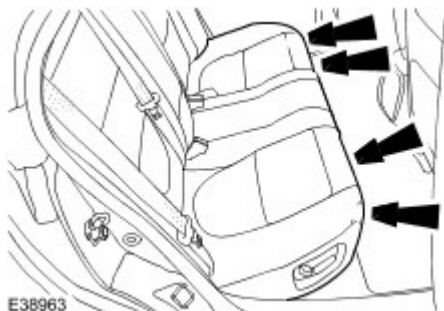


- 2 . **NOTE:**

Right-hand shown, left-hand similar.

Disconnect the rear seat cushion electrical connectors.



- 3 . Remove the rear seat cushion.

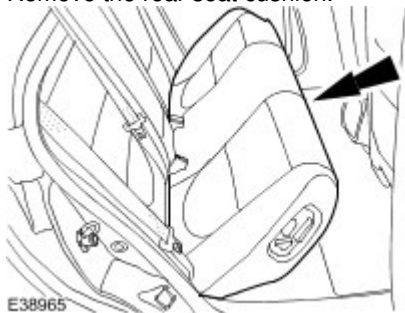

### Installation

- 1 . **NOTE:**

Make sure the rear seat cushion is correctly located under the rear retaining brackets.

To install, reverse the removal procedure.