


Audio Panel Controls

THE XJ, S-TYPE AND X-TYPE

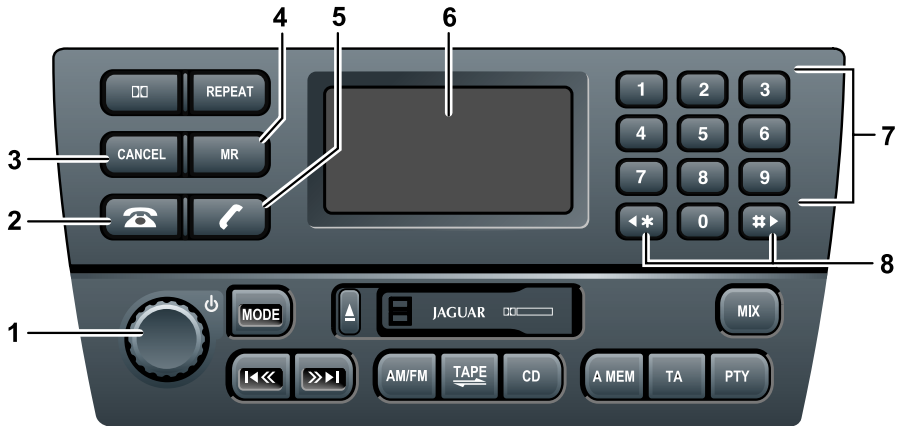


JOL3449

1. ON/OFF switch and volume control.
2. Phone mode button.
3. Cancel/correct telephone numbers.
4. Phone memory recall button.
5. Phone send/end calls
6. Display.
7. Phone keypad - buttons **0** to **9** (except where touch-screen is fitted, see page 34).
8. Scroll memory location.

Audio Panel Controls

THE XK ONLY

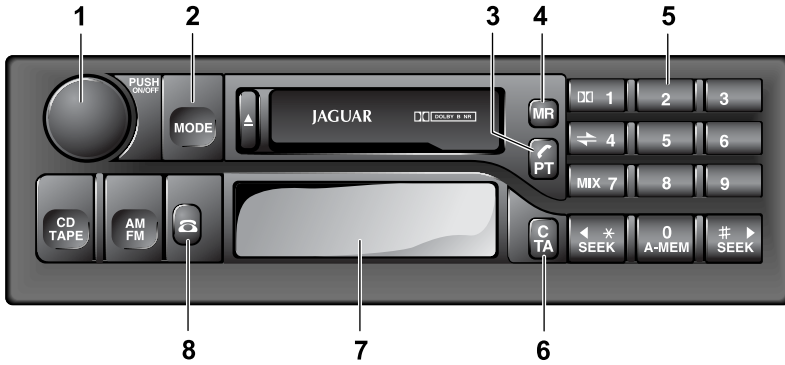

JOL3496

1. ON/OFF switch and volume control.
2. Mode.
3. Phone send/end calls.
4. Phone memory recall button.
5. Phone keypad - buttons **0** to **9**.
6. Phone clear.
7. Display.
8. Phone mode button.