

# Hands-free Operation



---

## RECEIVING A CALL



An incoming call automatically switches the sound system into the phone mode. The audio panel display will show Call and the phone will ring through the vehicle's audio system.

If automatic answer has been programmed the call will automatically answer after two rings.

### To answer:

Press  the steering wheel or;  
press  the audio panel.

### To end:

Press  the steering wheel or;  
press  the audio panel.

### Call line Ident


If the caller has the call line ident (CLI) feature, **Call** is shown on the audio panel display, followed by the caller's phone number and name (when available). The display may truncate lengthy names.


## MAKING A CALL

When making a call, there are three methods of dialling: keypad, memory search and last number redial.

### Keypad dialling

#### To dial:


Press and hold  on the steering wheel or;


press  on the audio panel.

**Phone** will be displayed.

Key in the phone number on the audio panel keypad. The number will be displayed.


#### To connect:


Press  on the steering wheel or;

press  on the audio panel.

The display will show **Calling**.

#### To end:

Press  on the steering wheel or;

press  on the audio panel.

# Hands-free Operation


---

## Speed dialling

**Note:** Speed dialling selects the first nine locations stored in your phone's address book.

### To dial:

Press and hold  on the steering wheel or;


press  on the audio panel.


**Phone** will be displayed.

On the audio panel keypad, press and hold the required speed dialling memory location number **1 to 9**, which **corresponds with locations 1 to 9 in your mobile phone's address book.**

After three seconds, **Calling** will be displayed.

### To end:


Press  on the steering wheel or;

press  on the audio panel.

**Note:** Speed dialling can only be used once your mobile phone's address book has been transferred to the vehicle's phone system. For more information, refer to page 25.

## MEMORY RECALL DIALLING

### Using audio panel

Press  the audio panel.

**Phone** will be displayed.

Press the **MR** button.


**Location** will be displayed.

On the audio panel keypad, press required memory number **1 to 499**.

**Note:** The location number of phone book entries stored on your mobile phone may vary from those stored in the vehicle phone book.

### To connect:


Press  the steering wheel or;

press  the audio panel.

The display will show **Calling**.

### To end:

Press  the steering wheel or;

press  the audio panel.

### Using steering wheel controls


Press and hold button **3**, see page 27.

**Phone** will be displayed.

On the audio panel keypad, press required memory number **1 to 749**.

### To connect:


Press  the steering wheel or;

press  the audio panel.

The display will show **Calling**.

### To end:

Press  the steering wheel or;

press  the audio panel.

# Hands-free Operation

---


## LAST NUMBER REDIAL

**Note:** Last number redial recalls the phone number of the last call made since the ignition was switched on.

When the ignition is switched off, the last number called may be lost from the system memory.

To dial:

Press  the steering wheel or;

press  the audio panel.


**Phone** will be displayed.

On the audio panel, press and hold the **MR** button. The display will show the last number called.

**Note:** If the last number was dialed using the audio panel keypad, you can change the number by pressing **Cancel**.

**To connect:**


Press  the steering wheel or;

press  the audio panel.

The display will show **Calling**.


**To end:**

Press  the steering wheel or;


press  the audio panel.

## MULTIZONE VOICE


(The XJ only, if fitted)

To transfer control of the phone from the rear of the vehicle to the front, when not on a call, press  once.

The display will show **Phone In Use**.

Press  a second time and the display will show **Phone**.

The rear system is now out of phone mode and the front occupants have full, hands-free control.

To transfer control of the phone during a call, press .

For more detailed information, please refer to the Rear Multimedia handbook.