



| | | | |
|---|------------|--|-----------|
| Accessory Connector – Rear | Fig. 08.5 | Blower – Automatic Climate Control | Fig. 06.2 |
| | Fig. 08.6 | Blower – Manual Climate Control | Fig. 06.1 |
| | Fig. 08.7 | Blower Series Resistor | Fig. 06.1 |
| | Fig. 08.8 | Brake Cancel Switch | Fig. 03.2 |
| | Fig. 08.9 | | Fig. 03.4 |
| | Fig. 19.1 | | Fig. 03.6 |
| Accessory Connector – Trailer Towing | Fig. 08.7 | Brake Fluid Level Switch | Fig. 07.1 |
| | Fig. 08.5 | Brake On / Off Switch | Fig. 03.1 |
| | Fig. 08.6 | | Fig. 03.3 |
| | Fig. 08.8 | | Fig. 03.4 |
| | Fig. 08.9 | | Fig. 03.5 |
| Accessory Connector – Cabin | Fig. 19.1 | | Fig. 03.6 |
| Accessory Relay | Fig. 01.4 | | Fig. 05.1 |
| Air Conditioning Blower Relay | Fig. 06.1 | | Fig. 05.2 |
| | Fig. 06.2 | | Fig. 05.3 |
| Air Conditioning Compressor Clutch Relay | Fig. 03.2 | | Fig. 08.3 |
| | Fig. 03.4 | | Fig. 08.4 |
| | Fig. 03.6 | Brake Pressure Sensor | Fig. 05.3 |
| Air Conditioning Compressor Clutch | Fig. 03.2 | Caravan Connector | Fig. 08.6 |
| | Fig. 03.4 | | Fig. 08.9 |
| | Fig. 03.6 | CD Autochanger | Fig. 15.1 |
| Air Conditioning Pressure Sensor | Fig. 03.2 | | Fig. 15.2 |
| | Fig. 03.4 | | Fig. 20.4 |
| | Fig. 03.6 | Cellular Phone Module | Fig. 16.1 |
| Air Temperature Blend Actuator | Fig. 06.1 | | Fig. 16.2 |
| | Fig. 06.2 | | Fig. 16.3 |
| AM /FM Antenna – Estate (Wagon) | Fig. 15.1 | | Fig. 16.4 |
| | Fig. 15.2 | | Fig. 20.4 |
| Ambient Temperature Sensor – 2.0 L D | Fig. 03.5 | CHT Sensor | Fig. 03.5 |
| Ambient Temperature Sensor | Fig. 06.2 | Cigar Lighter | Fig. 09.2 |
| Antenna Module – Sedan | Fig. 15.1 | | Fig. 19.1 |
| | Fig. 15.2 | CKP Sensor – 2.0 L D | Fig. 03.5 |
| Anti-Lock Braking / Traction Control Module | Fig. 05.2 | CKP Sensor – 2.0 L, 2.5 L, 3.0 L | Fig. 03.1 |
| | Fig. 20.1 | | Fig. 03.3 |
| | Fig. 20.2 | Climate Control Module – Panel | Fig. 06.1 |
| Anti-Lock Braking System Module | Fig. 05.1 | | Fig. 06.3 |
| | Fig. 20.1 | | Fig. 09.2 |
| | Fig. 20.2 | | Fig. 20.1 |
| APP Sensor – 2.0 L D | Fig. 03.5 | | Fig. 20.2 |
| APP Sensor – 2.5 L, 3.0 L | Fig. 03.1 | Climate Control Module – Remote | Fig. 06.2 |
| Audio Control Switches | Fig. 15.1 | | Fig. 06.3 |
| | Fig. 15.2 | | Fig. 20.1 |
| Audio Unit | Fig. 09.2 | | Fig. 20.2 |
| | Fig. 12.4 | Clutch Cancel Switch | Fig. 03.2 |
| | Fig. 12.5 | | Fig. 03.4 |
| | Fig. 15.1 | Clutch Pedal Safety Switch | Fig. 02.1 |
| | Fig. 15.2 | Clutch Switch – 2.0 L D | Fig. 03.5 |
| | Fig. 16.1 | | Fig. 03.6 |
| | Fig. 16.2 | CMP Sensor – 2.0 L D | Fig. 03.5 |
| | Fig. 16.3 | CMP Sensors – 2.0 L, 2.5 L, 3.0 L | Fig. 03.1 |
| | Fig. 16.4 | | Fig. 03.3 |
| | Fig. 20.3 | Cooling Fans | Fig. 03.2 |
| | Fig. 20.4 | | Fig. 03.4 |
| Auto Headlamps Sensor | Fig. 08.1 | | Fig. 03.6 |
| Automatic Transmission | Fig. 04.1 | Cooling Fan Module | Fig. 03.2 |
| | Fig. 04.2 | | Fig. 03.4 |
| Auxiliary Heater Relays | Fig. 03.6 | | Fig. 03.6 |
| Axle Sensors | Fig. 08.10 | Curtain Airbag Igniters | Fig. 17.1 |
| Battery Saver Relay | Fig. 01.7 | | Fig. 17.2 |
| Battery | Fig. 01.1 | Customer Power Connector | Fig. 19.1 |
| | Fig. 02.1 | | |
| | Fig. 02.2 | | |
| | Fig. 02.3 | | |



| | | | |
|--|-----------|--|-----------|
| Data Link Connector | Fig. 20.1 | EGR Solenoid Valve | Fig. 03.5 |
| | Fig. 20.2 | Electric Auxiliary Heater | Fig. 03.6 |
| | Fig. 20.3 | Electrochromic Rear View Mirror | Fig. 19.1 |
| Defrost Door Actuator | Fig. 06.1 | EMS Control Relay | Fig. 01.8 |
| | Fig. 06.2 | | Fig. 01.9 |
| Dip Beam Relay | Fig. 08.1 | Engine Control Module – 2.0 L D | Fig. 01.9 |
| | Fig. 08.2 | | Fig. 02.3 |
| Discharge Temperature Sensor | Fig. 06.1 | | Fig. 03.5 |
| | Fig. 06.2 | | Fig. 03.6 |
| Door Latch – Driver | Fig. 07.2 | | Fig. 12.4 |
| | Fig. 09.1 | | Fig. 12.5 |
| | Fig. 11.1 | | Fig. 20.1 |
| | Fig. 12.1 | | Fig. 20.2 |
| | Fig. 12.2 | | Fig. 20.3 |
| | Fig. 12.3 | Engine Control Module – 2.0 L | Fig. 01.8 |
| | Fig. 12.4 | | Fig. 02.2 |
| | Fig. 12.5 | | Fig. 03.3 |
| | Fig. 14.1 | | Fig. 03.4 |
| | Fig. 14.2 | | Fig. 12.4 |
| Door Latch – LH Rear | Fig. 09.1 | | Fig. 12.5 |
| | Fig. 12.1 | | Fig. 20.1 |
| | Fig. 12.2 | | Fig. 20.2 |
| | Fig. 12.3 | | Fig. 20.3 |
| | Fig. 12.4 | Engine Control Module – 2.5 L, 3.0 L | Fig. 01.8 |
| | Fig. 12.5 | | Fig. 02.1 |
| Door Latch – Passenger | Fig. 09.1 | | Fig. 03.1 |
| | Fig. 12.1 | | Fig. 03.2 |
| | Fig. 12.2 | | Fig. 12.4 |
| | Fig. 12.3 | | Fig. 12.5 |
| | Fig. 12.4 | | Fig. 20.1 |
| | Fig. 12.5 | | Fig. 20.2 |
| Door Latch – RH Rear | Fig. 09.1 | | Fig. 20.3 |
| | Fig. 12.1 | EOT Sensor | Fig. 03.1 |
| | Fig. 12.2 | | Fig. 03.3 |
| | Fig. 12.3 | EVAP Canister Close Valve | Fig. 03.1 |
| | Fig. 12.4 | EVAP Canister Purge Valve | Fig. 03.1 |
| | Fig. 12.5 | | Fig. 03.3 |
| Door Mirrors | Fig. 06.3 | Evaporator Temperature Sensor | Fig. 06.1 |
| | Fig. 10.2 | | Fig. 06.2 |
| | Fig. 10.3 | Fog Lamps – Front | Fig. 08.1 |
| Door Switch Pack – Driver | Fig. 09.2 | | Fig. 08.2 |
| | Fig. 10.2 | Fold Back Module | Fig. 10.2 |
| | Fig. 10.3 | Footwell Lamps | Fig. 09.1 |
| | Fig. 14.1 | Fresh / Recirculation Flap Actuator | Fig. 06.1 |
| Door Switch Pack – LH Rear | Fig. 09.2 | | Fig. 06.2 |
| | Fig. 14.1 | FTP Sensor | Fig. 03.1 |
| Door Switch Pack – Passenger | Fig. 09.2 | Fuel Injectors – 2.0 L D | Fig. 03.5 |
| | Fig. 14.1 | Fuel Injectors – 2.0 L, 2.5 L, 3.0 L | Fig. 03.2 |
| Door Switch Pack – RH Rear | Fig. 09.2 | | Fig. 03.4 |
| | Fig. 14.1 | Fuel Level Sensors | Fig. 07.1 |
| Dual Airbag Igniters | Fig. 17.1 | Fuel Metering Valve | Fig. 03.5 |
| | Fig. 17.2 | Fuel Pump – 2.0 L | Fig. 03.4 |
| Dynamic Stability Control Module | Fig. 05.3 | Fuel Pump – 2.5 L, 3.0 L | Fig. 03.2 |
| | Fig. 20.1 | | Fig. 03.2 |
| | Fig. 20.2 | Fuel Pump Module | Fig. 03.2 |
| Dynamic Stability Control Switch | Fig. 05.3 | Fuel Pump Relay | Fig. 03.4 |
| | Fig. 09.2 | Fuel-Fired Auxiliary Heater Module | Fig. 03.6 |
| ECT Sensor | Fig. 03.1 | | Fig. 20.3 |
| | Fig. 03.3 | Full Range Speaker – Rear | Fig. 15.1 |
| EFT Sensor – 2.0 L D | Fig. 03.5 | | |
| EFT Sensor – 2.5 L, 3.0 L | Fig. 03.1 | | |



| | | | |
|---|------------|--|-----------|
| General Electronic Module | Fig. 01.7 | Hood Security Switch | Fig. 12.4 |
| | Fig. 02.1 | | Fig. 12.5 |
| | Fig. 02.2 | Horn Relay – 2.0 L D | Fig. 19.1 |
| | Fig. 02.3 | Horn Relay – 2.0 L, 2.5 L, 3.0 L | Fig. 19.1 |
| | Fig. 07.1 | Horn Switch | Fig. 19.1 |
| | Fig. 07.2 | Horns | Fig. 19.1 |
| | Fig. 08.1 | Idle Speed Control Valve | Fig. 03.3 |
| | Fig. 08.2 | Ignition Capacitor | Fig. 03.2 |
| | Fig. 08.3 | | Fig. 03.4 |
| | Fig. 08.4 | Ignition Modules and Coils | Fig. 03.2 |
| | Fig. 09.1 | | Fig. 03.4 |
| | Fig. 12.1 | Ignition Switch | Fig. 01.1 |
| | Fig. 12.2 | | Fig. 01.4 |
| | Fig. 12.3 | | Fig. 01.5 |
| | Fig. 12.4 | | Fig. 02.1 |
| | Fig. 12.5 | | Fig. 02.2 |
| | Fig. 13.1 | | Fig. 02.3 |
| | Fig. 13.2 | | Fig. 04.1 |
| | Fig. 13.3 | | Fig. 04.2 |
| | Fig. 14.1 | | Fig. 07.2 |
| | Fig. 14.2 | | Fig. 12.1 |
| | Fig. 18.1 | | Fig. 12.2 |
| | Fig. 19.1 | | Fig. 12.3 |
| | Fig. 20.3 | | Fig. 12.4 |
| | | | Fig. 12.5 |
| Generator – 2.0 L D | Fig. 02.3 | Impact Sensor – Front | Fig. 17.1 |
| Generator – 2.0 L, 2.5 L, 3.0 L | Fig. 02.1 | | Fig. 17.2 |
| | Fig. 02.2 | IMT Solenoid Valves | Fig. 03.1 |
| Glove Box Lamp | Fig. 08.1 | | Fig. 03.3 |
| | Fig. 08.2 | In-Car Temperature Sensor | Fig. 06.2 |
| | Fig. 09.1 | Inclination Sensor | Fig. 12.4 |
| Glow Plug Power Eyelet | Fig. 03.5 | | Fig. 12.5 |
| Glow Plug Relay | Fig. 03.5 | Inertia Switch | Fig. 01.1 |
| Handset Receiver | Fig. 16.2 | | Fig. 01.5 |
| | Fig. 16.4 | | Fig. 12.1 |
| Handset | Fig. 16.1 | | Fig. 12.2 |
| | Fig. 16.3 | | Fig. 12.3 |
| Hazard and Seat Heater Switches | Fig. 09.2 | | Fig. 12.4 |
| Hazard Switch | Fig. 08.1 | | Fig. 12.5 |
| | Fig. 08.2 | Instrument Cluster | Fig. 02.1 |
| | Fig. 08.3 | | Fig. 02.2 |
| | Fig. 08.4 | | Fig. 02.3 |
| Headlamp Leveling Module | Fig. 08.10 | | Fig. 07.1 |
| | Fig. 20.1 | | Fig. 07.2 |
| | Fig. 20.2 | | Fig. 08.3 |
| | Fig. 20.3 | | Fig. 08.4 |
| Headlamp Units | Fig. 08.1 | | Fig. 09.2 |
| | Fig. 08.2 | | Fig. 12.1 |
| | Fig. 08.10 | | Fig. 12.2 |
| Heated Door Mirrors | Fig. 06.3 | | Fig. 12.3 |
| Heated Rear Window – Estate (Wagon) | Fig. 06.3 | | Fig. 12.4 |
| Heated Rear Window – Sedan | Fig. 06.3 | | Fig. 12.5 |
| | Fig. 15.1 | | Fig. 20.1 |
| | Fig. 15.2 | | Fig. 20.2 |
| Heated Rear Window Relay | Fig. 06.3 | | Fig. 20.3 |
| High-Mount Stop Lamp – Estate (Wagon) | Fig. 08.4 | Interior Lamp – Rear | Fig. 09.1 |
| | Fig. 08.8 | IP Sensor – 2.0 L D | Fig. 03.5 |
| | Fig. 08.9 | IP Sensor – 2.5 L, 3.0 L | Fig. 03.1 |
| High-Mount Stop Lamp – Sedan | Fig. 08.3 | J-Gate Module | Fig. 04.1 |
| | Fig. 08.5 | | Fig. 04.2 |
| | Fig. 08.6 | | Fig. 07.2 |
| | Fig. 08.7 | | Fig. 09.2 |
| HO2 Sensors | Fig. 03.1 | | Fig. 20.1 |
| | Fig. 03.3 | | Fig. 20.2 |



| | | | |
|---|------------|--|------------|
| Knee Bolster Igniter – Driver | Fig. 17.2 | Passenger Junction Fuse Box | Fig. 01.1 |
| Knock Sensor – 2.0 L D | Fig. 03.5 | | Fig. 01.3 |
| Knock Sensor – 2.0 L, 2.5 L, 3.0 L | Fig. 03.1 | | Fig. 01.4 |
| | Fig. 03.3 | | Fig. 01.6 |
| License Plate Lamps – Estate (Wagon) | Fig. 08.4 | | Fig. 01.7 |
| | Fig. 08.8 | | Fig. 01.8 |
| | Fig. 08.9 | | Fig. 03.1 |
| | Fig. 08.4 | | Fig. 03.4 |
| | Fig. 08.8 | | Fig. 06.1 |
| | Fig. 08.9 | | Fig. 06.2 |
| License Plate Lamps – Sedan | Fig. 08.3 | | Fig. 06.3 |
| | Fig. 08.5 | | Fig. 08.1 |
| | Fig. 08.6 | | Fig. 08.2 |
| | Fig. 08.7 | | Fig. 08.3 |
| | Fig. 08.3 | | Fig. 08.4 |
| | Fig. 08.5 | | Fig. 10.2 |
| | Fig. 08.6 | | Fig. 13.1 |
| | Fig. 08.7 | | Fig. 13.2 |
| Lumbar Switch Packs | Fig. 11.3 | | Fig. 13.3 |
| | Fig. 11.4 | Passenger Seat Belt Tension Sensor | Fig. 17.2 |
| MAF Sensor – 2.0 L D | Fig. 03.5 | Passenger Seat Weight Pressure Sensor | Fig. 17.1 |
| MAF Sensor – 2.0 L, 2.5 L, 3.0 L | Fig. 03.1 | | Fig. 17.2 |
| | Fig. 03.3 | Passenger Seat Weight Sensing Module | Fig. 17.1 |
| Main Beam / Front Fog Relay | Fig. 08.1 | | Fig. 17.2 |
| | Fig. 08.2 | Passive Anti-Theft System Transceiver | Fig. 02.1 |
| MAP Sensor | Fig. 03.1 | | Fig. 02.2 |
| | Fig. 03.3 | | Fig. 02.3 |
| Master Lighting Switch | Fig. 07.1 | | Fig. 12.4 |
| | Fig. 08.1 | | Fig. 12.5 |
| | Fig. 08.2 | Power Amplifier | Fig. 15.2 |
| | Fig. 08.3 | | Fig. 20.4 |
| | Fig. 08.4 | Power Distribution Fuse Box Ignition Relay | Fig. 01.5 |
| | Fig. 08.10 | Power Distribution Fuse Box | Fig. 01.1 |
| | Fig. 09.2 | | Fig. 01.2 |
| Mid Bass Speakers – Front Door | Fig. 15.1 | | Fig. 01.5 |
| | Fig. 15.2 | | Fig. 01.8 |
| Mid Bass Speakers – Rear | Fig. 15.2 | | Fig. 01.9 |
| Navigation Control Module | Fig. 16.1 | | Fig. 02.1 |
| | Fig. 16.2 | | Fig. 02.2 |
| | Fig. 16.3 | | Fig. 02.3 |
| | Fig. 16.4 | | Fig. 03.2 |
| | Fig. 16.5 | | Fig. 03.4 |
| | Fig. 16.6 | | Fig. 03.5 |
| | Fig. 20.3 | | Fig. 03.6 |
| | Fig. 20.4 | | Fig. 06.3 |
| Navigation GPS Antennas | Fig. 16.5 | | Fig. 08.1 |
| | Fig. 16.6 | | Fig. 08.2 |
| Oil Pressure Switches | Fig. 07.1 | | Fig. 08.10 |
| Panel / Floor Actuator | Fig. 06.1 | | Fig. 13.1 |
| | Fig. 06.2 | | Fig. 13.2 |
| Parking Aid Module | Fig. 18.1 | Powerwash Pump Relay | Fig. 13.1 |
| | Fig. 20.3 | | Fig. 13.2 |
| Parking Aid Sensors | Fig. 18.1 | Powerwash Pump | Fig. 13.1 |
| Parking Aid Sounders | Fig. 18.1 | | Fig. 13.2 |
| Parking Brake Switch | Fig. 07.1 | Rain Sensing Module | Fig. 13.2 |
| Passenger Airbag Deactivated Indicator Lamp | Fig. 17.1 | Rain Sensor | Fig. 13.2 |
| | Fig. 17.2 | Restraints Control Module – AWD Vehicles | Fig. 07.1 |
| Passenger Junction Fuse Box Ignition Relay | Fig. 01.6 | | Fig. 07.2 |
| | | | Fig. 17.2 |
| | | | Fig. 20.3 |
| | | Restraints Control Module – FWD Vehicles | Fig. 07.1 |
| | | | Fig. 07.2 |
| | | | Fig. 17.1 |
| | | | Fig. 20.3 |



| | | | |
|--|-----------|---|-----------|
| Reverse Lamps Relay | Fig. 08.3 | Seat Motors – Passenger | Fig. 11.2 |
| | Fig. 08.4 | Seat Motors and Position Sensors – Driver | Fig. 11.1 |
| Reverse Lamps Switch | Fig. 08.3 | Seat Movement Motors – RH | Fig. 11.3 |
| | Fig. 08.4 | | Fig. 11.4 |
| RF Module | Fig. 08.1 | Seat Movement Motors – LH | Fig. 11.3 |
| | Fig. 08.2 | | Fig. 11.4 |
| | Fig. 09.1 | Seat Position Switch – Driver | Fig. 17.1 |
| | Fig. 12.1 | | Fig. 17.2 |
| | Fig. 12.2 | Seat Position Switch – Passenger | Fig. 17.2 |
| | Fig. 12.3 | Seat Switch Packs | Fig. 11.3 |
| | Fig. 12.4 | | Fig. 11.4 |
| | Fig. 12.5 | | Fig. 11.5 |
| | Fig. 14.1 | Security Indicator | Fig. 12.4 |
| | Fig. 14.2 | | Fig. 12.5 |
| Roof Console – Printed Circuit Board | Fig. 09.1 | Security Sounders | Fig. 12.4 |
| | Fig. 09.2 | | Fig. 12.5 |
| | Fig. 12.4 | Side Airbag Igniters | Fig. 17.1 |
| | Fig. 12.5 | | Fig. 17.2 |
| | Fig. 14.2 | Side Impact Sensors | Fig. 17.1 |
| | Fig. 16.1 | | Fig. 17.2 |
| | Fig. 16.2 | Side Marker Lamps – Front | Fig. 08.1 |
| | Fig. 16.3 | | Fig. 08.2 |
| | Fig. 16.4 | Side Marker Lamps – Rear | Fig. 08.3 |
| | Fig. 16.6 | | Fig. 08.7 |
| | Fig. 18.1 | Slave Ignition Relay | Fig. 01.5 |
| | Fig. 19.1 | Sliding Roof Module | Fig. 14.2 |
| | Fig. 20.3 | Solid State Relay | Fig. 03.6 |
| Roof Console – Without Printed Circuit Board | Fig. 09.1 | Speed Control Module | Fig. 03.4 |
| | Fig. 12.4 | Speed Control Switches | Fig. 03.2 |
| | Fig. 12.5 | | Fig. 03.4 |
| | Fig. 14.2 | | Fig. 03.6 |
| | Fig. 16.1 | Starter Motor – 2.0 L D | Fig. 02.3 |
| | Fig. 16.2 | Starter Motor – 2.0 L, 2.5 L, 3.0 L | Fig. 02.1 |
| | Fig. 16.3 | | Fig. 02.2 |
| | Fig. 16.4 | Starter Relay | Fig. 02.1 |
| | Fig. 16.6 | | Fig. 02.2 |
| | Fig. 20.3 | | Fig. 02.3 |
| Seat Back Heaters | Fig. 11.6 | Steering Angle Sensor | Fig. 05.3 |
| | Fig. 11.7 | | Fig. 20.1 |
| Seat Belt Buckle Pretensioner Igniters | Fig. 17.1 | | Fig. 20.2 |
| | Fig. 17.2 | Steering Wheel | Fig. 09.2 |
| Seat Belt Reel Pretensioner Igniters | Fig. 17.2 | | Fig. 16.3 |
| Seat Belt Switches | Fig. 17.1 | | Fig. 16.4 |
| | Fig. 17.2 | | Fig. 19.1 |
| Seat Cushion Heaters | Fig. 11.6 | Sub Woofers | Fig. 15.2 |
| | Fig. 11.7 | Tail Gate Latch | Fig. 09.1 |
| Seat Heater Modules | Fig. 11.7 | | Fig. 12.3 |
| Seat Heater Switches | Fig. 11.6 | | Fig. 12.5 |
| | Fig. 11.7 | Tail Gate Release Switch | Fig. 12.3 |
| Seat Lumbar Pump – Driver | Fig. 11.1 | Tail Glass Latch | Fig. 09.1 |
| Seat Lumbar Pump – LH | Fig. 11.3 | | Fig. 12.3 |
| | Fig. 11.4 | | Fig. 12.5 |
| Seat Lumbar Pump – RH | Fig. 11.3 | Tail Glass Release Switch | Fig. 12.3 |
| | Fig. 11.4 | Tail Lamp Units | Fig. 08.3 |
| Seat Lumbar Pump – Passenger | Fig. 11.2 | | Fig. 08.4 |
| Seat Module – Driver | Fig. 06.3 | | Fig. 08.5 |
| | Fig. 10.3 | | Fig. 08.6 |
| | Fig. 11.1 | | Fig. 08.7 |
| | Fig. 11.6 | | Fig. 08.8 |
| | Fig. 20.1 | | Fig. 08.8 |
| | Fig. 20.2 | | Fig. 08.9 |
| Seat Module – Passenger | Fig. 11.2 | | |
| | Fig. 11.6 | | |
| Seat Motor – RH | Fig. 11.5 | | |
| Seat Motor – LH | Fig. 11.5 | | |



| | | | |
|---|-----------|---|-----------|
| Telematics Display | Fig. 09.2 | Tweeter Speakers – Rear | Fig. 15.2 |
| | Fig. 16.1 | Vacuum Module | Fig. 05.1 |
| | Fig. 16.2 | | Fig. 05.2 |
| | Fig. 16.3 | | Fig. 05.3 |
| | Fig. 16.4 | Vacuum Pump | Fig. 05.1 |
| | Fig. 16.5 | | Fig. 05.2 |
| | Fig. 16.6 | | Fig. 05.3 |
| Telephone Antenna – Bumper | Fig. 16.2 | Vanity Mirror Lamps | Fig. 09.1 |
| | Fig. 16.4 | Vehicle Information Antenna and Amplifier | Fig. 16.6 |
| Telephone Antenna – Estate (Wagon): AM/FM | Fig. 16.1 | Vehicle Information Control Module | Fig. 16.6 |
| | Fig. 16.3 | Vehicle Information Sensor | Fig. 16.6 |
| Telephone Antenna – Sedan: Bumper | Fig. 16.1 | Voice Activation Module | Fig. 16.3 |
| | Fig. 16.3 | | Fig. 16.4 |
| Throttle Motor Relay | Fig. 03.1 | | Fig. 20.4 |
| Throttle Motor | Fig. 03.1 | VVT Solenoid Valves | Fig. 03.1 |
| T-MAP Sensor | Fig. 03.5 | | Fig. 03.3 |
| TP Sensor – 2.0 L | Fig. 03.3 | Washer Fluid Level Switch | Fig. 07.1 |
| TP Sensor – 2.5 L, 3.0 L | Fig. 03.1 | Wheel Speed Sensors | Fig. 05.1 |
| Traction Control Switch | Fig. 05.2 | | Fig. 05.2 |
| | Fig. 09.2 | | Fig. 05.3 |
| Trailer Towing Connector | Fig. 08.5 | Window Motors | Fig. 14.1 |
| | Fig. 08.6 | Windshield Heaters | Fig. 06.3 |
| | Fig. 08.7 | Windshield Heater Relay | Fig. 06.3 |
| | Fig. 08.8 | Windshield Washer Pump | Fig. 13.1 |
| | Fig. 08.9 | | Fig. 13.2 |
| Trailer Towing Module | Fig. 08.5 | | Fig. 13.3 |
| | Fig. 08.6 | Windshield Wiper Motor Relay | Fig. 13.1 |
| | Fig. 08.7 | | Fig. 13.2 |
| | Fig. 08.8 | | Fig. 13.3 |
| | Fig. 08.9 | Wiper Motor – Front | Fig. 13.1 |
| Transit Isolation Relay | Fig. 01.1 | | Fig. 13.2 |
| Transmission Control Module – 16 Bit | Fig. 04.1 | Wiper Motor – Rear | Fig. 13.3 |
| | Fig. 20.1 | Wiper Motor Relay – Rear | Fig. 13.3 |
| | Fig. 20.2 | Wiper Switch Assembly | Fig. 13.1 |
| Transmission Control Module – 32 Bit | Fig. 04.2 | | Fig. 13.2 |
| | Fig. 20.1 | | Fig. 13.3 |
| | Fig. 20.2 | Yaw Rate Sensor | Fig. 05.3 |
| Transmission Range Sensor | Fig. 02.1 | | Fig. 20.1 |
| | Fig. 02.2 | | Fig. 20.2 |
| | Fig. 04.1 | | |
| | Fig. 04.2 | | |
| Trunk Lamps | Fig. 09.1 | | |
| Trunk Lock Motor | Fig. 09.1 | | |
| | Fig. 12.1 | | |
| | Fig. 12.2 | | |
| | Fig. 12.4 | | |
| Trunk Release Switch | Fig. 12.1 | | |
| | Fig. 12.2 | | |
| Turbocharger Solenoid Valve | Fig. 03.5 | | |
| Turn Signal Repeaters – Front | Fig. 08.1 | | |
| | Fig. 08.2 | | |
| Turn Signal Switch | Fig. 07.1 | | |
| | Fig. 08.1 | | |
| | Fig. 08.2 | | |
| | Fig. 08.3 | | |
| | Fig. 08.4 | | |
| TV Antennas and Amplifiers | Fig. 16.5 | | |
| | Fig. 16.6 | | |
| Tweeter Speakers – Front Door | Fig. 15.1 | | |
| | Fig. 15.2 | | |