

Navigation System Display Module (86.62.07)

Removal

Vehicles with automatic transmission

1 . **NOTE:**

To aid removal of the navigation module and audio unit place the J-gate in the 'D' position.

Remove the J-gate surround.



Vehicles with manual transmission


2 . Detach the gear selector surround.



All vehicles

3 . Disconnect the battery ground cable. For additional information, refer to <<414-01>>.


4 . Remove the ashtray retaining screws.

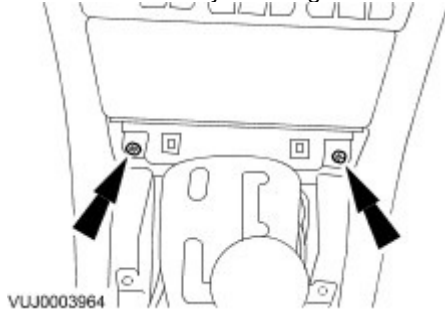


5 . Remove the ashtray

▶ Disconnect the electrical connectors.


Remove the ashtray.

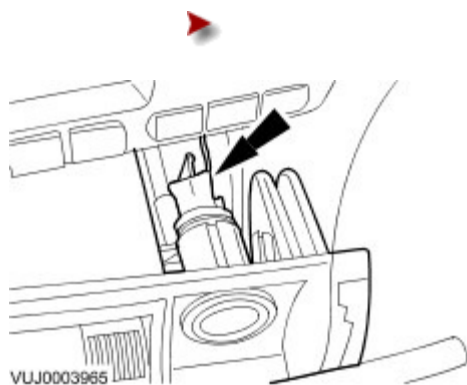


6 . Remove the switch pack trim cover.

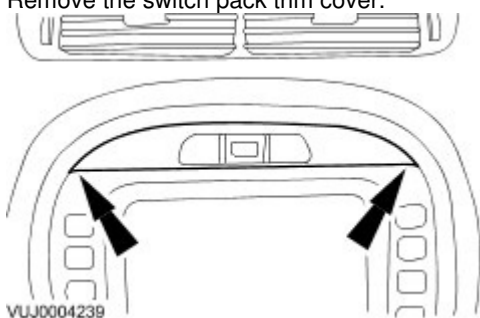


7 . Remove the retaining screw cover plate.

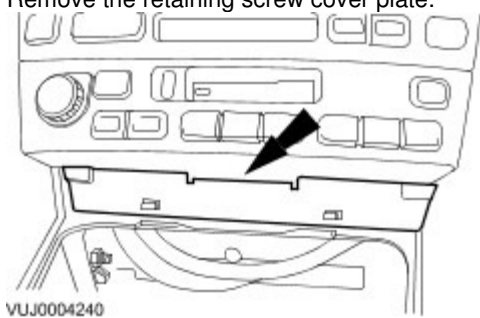


8 . Remove the display mounting bracket upper retaining screws.

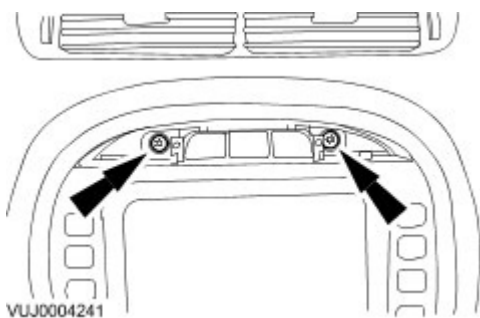

9 . Remove the display mounting bracket lower retaining screws.

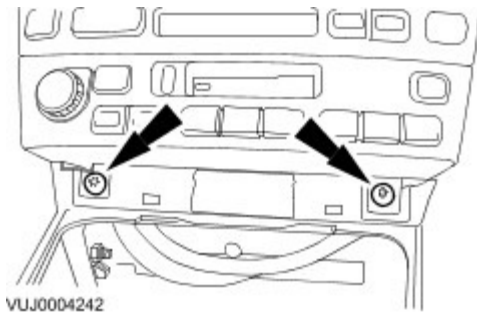


10 . Disconnect the electrical connectors.

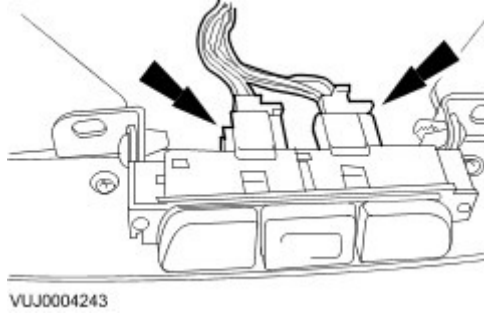


11 . Remove the display module and audio unit.

- 1) Disconnect the electrical connectors and the fibre optic connector.
- 2) Remove the display module and audio unit.

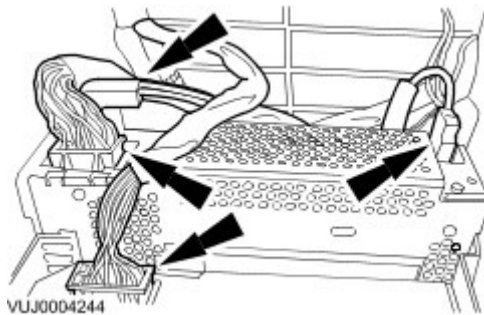

12 . Remove the navigation system display module.

- 1) Remove the navigation system display retaining screws.
- 2) Remove the navigation system display module.

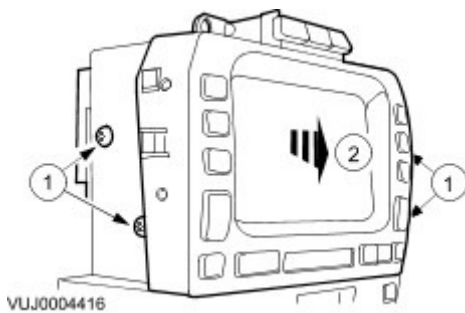

Installation

1 . To install, reverse the removal procedure.