

<b>A</b>		Battery Saver Relay . . . . .	Fig. 01.7
Accessory Connector		Blower	
Cabin . . . . .	Fig. 19.1	Automatic Climate Control . . . . .	Fig. 06.2
Rear . . . . .	Fig. 08.5	Manual Climate Control . . . . .	Fig. 06.1
. . . . .	Fig. 08.6	Blower Series Resistor . . . . .	Fig. 06.1
. . . . .	Fig. 08.7	Brake Cancel Switch . . . . .	Fig. 03.2
. . . . .	Fig. 08.8	. . . . .	Fig. 03.4
. . . . .	Fig. 08.9	. . . . .	Fig. 03.6
. . . . .	Fig. 19.1	Brake Fluid Level Switch . . . . .	Fig. 07.1
Trailer Towing . . . . .	Fig. 08.5	Brake On / Off Switch . . . . .	Fig. 03.1
. . . . .	Fig. 08.6	. . . . .	Fig. 03.3
. . . . .	Fig. 08.7	. . . . .	Fig. 03.4
. . . . .	Fig. 08.8	. . . . .	Fig. 03.5
. . . . .	Fig. 08.9	. . . . .	Fig. 03.6
Accessory Relay . . . . .	Fig. 01.4	. . . . .	Fig. 05.1
Air Conditioning		. . . . .	Fig. 05.2
Blower Relay . . . . .	Fig. 06.1	. . . . .	Fig. 05.3
. . . . .	Fig. 06.2	. . . . .	Fig. 08.3
Compressor Clutch . . . . .	Fig. 03.2	. . . . .	Fig. 08.4
. . . . .	Fig. 03.4	Brake Pressure Sensor . . . . .	Fig. 05.3
. . . . .	Fig. 03.6		
Compressor Clutch Relay . . . . .	Fig. 03.2	<b>C</b>	
. . . . .	Fig. 03.4	Caravan Connector . . . . .	Fig. 08.6
. . . . .	Fig. 03.6	. . . . .	Fig. 08.9
Pressure Sensor . . . . .	Fig. 03.2	CD Autochanger . . . . .	Fig. 15.1
. . . . .	Fig. 03.4	. . . . .	Fig. 15.2
. . . . .	Fig. 03.6	. . . . .	Fig. 20.4
Air Temperature Blend Actuator . . . . .	Fig. 06.1	Cellular Phone Module . . . . .	Fig. 16.1
. . . . .	Fig. 06.2	. . . . .	Fig. 16.2
AM / FM Antenna – Estate (Wagon) . . . . .	Fig. 15.1	. . . . .	Fig. 20.4
. . . . .	Fig. 15.2	CHT Sensor . . . . .	Fig. 03.5
Ambient Temperature Sensor . . . . .	Fig. 06.2	Cigar Lighter . . . . .	Fig. 09.2
Diesel . . . . .	Fig. 03.5	. . . . .	Fig. 19.1
Antenna Module – Sedan . . . . .	Fig. 15.1	CKP Sensor	
. . . . .	Fig. 15.2	2.0 L, 2.5 L, 3.0 L . . . . .	Fig. 03.1
Anti-Lock Braking System Module . . . . .	Fig. 05.1	. . . . .	Fig. 03.3
. . . . .	Fig. 20.1	Diesel . . . . .	Fig. 03.5
. . . . .	Fig. 20.2	Climate Control Module	
Anti-Lock Braking / Traction Control Module . . . . .	Fig. 05.2	Panel . . . . .	Fig. 06.1
. . . . .	Fig. 20.1	. . . . .	Fig. 06.3
. . . . .	Fig. 20.2	. . . . .	Fig. 09.2
APP Sensor		. . . . .	Fig. 20.1
2.5 L, 3.0 L . . . . .	Fig. 03.1	. . . . .	Fig. 20.2
Diesel . . . . .	Fig. 03.5	Remote . . . . .	Fig. 06.2
Audio Control Switches . . . . .	Fig. 15.1	. . . . .	Fig. 06.3
. . . . .	Fig. 15.2	. . . . .	Fig. 20.1
Audio Unit . . . . .	Fig. 09.2	. . . . .	Fig. 20.2
. . . . .	Fig. 12.4	Clutch Cancel Switch . . . . .	Fig. 03.2
. . . . .	Fig. 12.5	. . . . .	Fig. 03.4
. . . . .	Fig. 15.1	Clutch Pedal Safety Switch . . . . .	Fig. 02.1
. . . . .	Fig. 15.2	Clutch Switch – Diesel . . . . .	Fig. 03.5
. . . . .	Fig. 16.1	. . . . .	Fig. 03.6
. . . . .	Fig. 16.2	CMP Sensors	
. . . . .	Fig. 16.3	2.0 L, 2.5 L, 3.0 L . . . . .	Fig. 03.1
. . . . .	Fig. 20.3	. . . . .	Fig. 03.3
. . . . .	Fig. 20.4	Diesel . . . . .	Fig. 03.5
Auto Headlamps Sensor . . . . .	Fig. 08.1	Cooling Fan Module . . . . .	Fig. 03.2
Automatic Transmission . . . . .	Fig. 04.1	. . . . .	Fig. 03.4
. . . . .	Fig. 04.2	. . . . .	Fig. 03.6
Auxiliary Heater Relays . . . . .	Fig. 03.6	Cooling Fans . . . . .	Fig. 03.2
Axle Sensors . . . . .	Fig. 08.10	. . . . .	Fig. 03.4
		. . . . .	Fig. 03.6
<b>B</b>		Curtain Airbag Igniters . . . . .	Fig. 17.1
Battery . . . . .	Fig. 01.1	. . . . .	Fig. 17.2
. . . . .	Fig. 02.1	Customer Power Connector . . . . .	Fig. 19.1
. . . . .	Fig. 02.2		
. . . . .	Fig. 02.3		

<b>D</b>	
Data Link Connector .....	Fig. 20.1
.....	Fig. 20.2
.....	Fig. 20.3
Defrost Door Actuator .....	Fig. 06.1
.....	Fig. 06.2
Dip Beam Relay .....	Fig. 08.1
.....	Fig. 08.2
Discharge Temperature Sensor .....	Fig. 06.1
.....	Fig. 06.2
Door Latch	
Driver .....	Fig. 07.2
.....	Fig. 09.1
.....	Fig. 11.1
.....	Fig. 12.1
.....	Fig. 12.2
.....	Fig. 12.3
.....	Fig. 12.4
.....	Fig. 12.5
.....	Fig. 14.1
.....	Fig. 14.2
LH Rear .....	Fig. 09.1
.....	Fig. 12.1
.....	Fig. 12.2
.....	Fig. 12.3
.....	Fig. 12.4
.....	Fig. 12.5
Passenger .....	Fig. 09.1
.....	Fig. 12.1
.....	Fig. 12.2
.....	Fig. 12.3
.....	Fig. 12.4
.....	Fig. 12.5
RH Rear .....	Fig. 09.1
.....	Fig. 12.1
.....	Fig. 12.2
.....	Fig. 12.3
.....	Fig. 12.4
.....	Fig. 12.5
Door Mirrors .....	Fig. 06.3
.....	Fig. 10.1
.....	Fig. 10.2
Door Switch Pack	
Driver .....	Fig. 09.2
.....	Fig. 10.1
.....	Fig. 10.2
.....	Fig. 14.1
LH Rear .....	Fig. 09.2
.....	Fig. 14.1
Passenger .....	Fig. 09.2
.....	Fig. 14.1
RH Rear .....	Fig. 09.2
.....	Fig. 14.1
Dual Airbag Igniters .....	Fig. 17.1
.....	Fig. 17.2
Dynamic Stability Control Module .....	Fig. 05.3
.....	Fig. 20.1
.....	Fig. 20.2
Dynamic Stability Control Switch .....	Fig. 05.3
.....	Fig. 09.2
<b>E</b>	
ECT Sensor .....	Fig. 03.1
.....	Fig. 03.3
EFT Sensor	
2.5 L, 3.0 L .....	Fig. 03.1
Diesel .....	Fig. 03.5
EGR Solenoid Valve .....	Fig. 03.5
Electric Auxiliary Heater .....	Fig. 03.6
Electrochromic Rear View Mirror .....	Fig. 19.1
EMS Control Relay .....	Fig. 01.8
.....	Fig. 01.9
Engine Control Module	
2.0 L .....	Fig. 01.8
.....	Fig. 02.2
.....	Fig. 03.3
.....	Fig. 03.4
.....	Fig. 12.4
.....	Fig. 12.5
.....	Fig. 20.1
.....	Fig. 20.2
.....	Fig. 20.3
2.5 L, 3.0 L .....	Fig. 01.8
.....	Fig. 02.1
.....	Fig. 03.1
.....	Fig. 03.2
.....	Fig. 12.4
.....	Fig. 12.5
.....	Fig. 20.1
.....	Fig. 20.2
.....	Fig. 20.3
Diesel .....	Fig. 01.9
.....	Fig. 02.3
.....	Fig. 03.5
.....	Fig. 03.6
.....	Fig. 12.4
.....	Fig. 12.5
.....	Fig. 20.1
.....	Fig. 20.2
.....	Fig. 20.3
EOT Sensor .....	Fig. 03.1
.....	Fig. 03.3
EVAP Canister Close Valve .....	Fig. 03.1
EVAP Canister Purge Valve .....	Fig. 03.1
.....	Fig. 03.3
Evaporator Temperature Sensor .....	Fig. 06.1
.....	Fig. 06.2
<b>F</b>	
Fog Lamps – Front .....	Fig. 08.1
.....	Fig. 08.2
Fold Back Module .....	Fig. 10.1
Footwell Lamps .....	Fig. 09.1
Fresh / Recirculation Flap Actuator .....	Fig. 06.1
.....	Fig. 06.2
FTP Sensor .....	Fig. 03.1
Fuel Injectors	
2.0 L, 2.5 L, 3.0 L .....	Fig. 03.2
.....	Fig. 03.4
Diesel .....	Fig. 03.5
Fuel Level Sensors	
2.0 L, Diesel .....	Fig. 07.1
2.5 L, 3.0 L (NAS) .....	Fig. 07.1
2.5 L, 3.0 L (ROW) .....	Fig. 07.1
Fuel Metering Valve .....	Fig. 03.5
Fuel Pump	
2.0 L .....	Fig. 03.4
2.5 L, 3.0 L .....	Fig. 03.2
Fuel Pump Module .....	Fig. 03.2
Fuel Pump Relay .....	Fig. 03.4
Fuel-Fired Auxiliary Heater Module .....	Fig. 03.6
.....	Fig. 20.3
Full Range Speakers – Rear .....	Fig. 15.1



## K

Knee Bolster Igniter – Driver	Fig. 17.2
Knock Sensor	
2.0 L, 2.5 L, 3.0 L	Fig. 03.1
	Fig. 03.3
Diesel	Fig. 03.5

## L

License Plate Lamps	
Estate (Wagon)	Fig. 08.4
	Fig. 08.8
	Fig. 08.9
Sedan	Fig. 08.3
	Fig. 08.5
	Fig. 08.6
	Fig. 08.7
Lumbar Switch Packs	Fig. 11.3
	Fig. 11.4

## M

MAF Sensor	
2.0 L, 2.5 L, 3.0 L	Fig. 03.1
	Fig. 03.3
Diesel	Fig. 03.5
Main Beam / Front Fog Relay	Fig. 08.1
	Fig. 08.2
MAP Sensor	Fig. 03.1
	Fig. 03.3
Master Lighting Switch	Fig. 07.1
	Fig. 08.1
	Fig. 08.2
	Fig. 08.3
	Fig. 08.4
	Fig. 08.10
	Fig. 09.2
Mid Bass Speakers	
Front	Fig. 15.1
	Fig. 15.2
Rear	Fig. 15.2

## N

Navigation Control Module	Fig. 16.1
	Fig. 16.2
	Fig. 16.4
	Fig. 16.5
	Fig. 20.3
	Fig. 20.4
Navigation GPS Antennas	Fig. 16.4
	Fig. 16.5

## O

Oil Pressure Switches	
2.0 L, 2.5 L, 3.0 L	Fig. 07.1
Diesel	Fig. 07.1

## P

Panel / Floor Actuator	Fig. 06.1
	Fig. 06.2
Parking Aid Module	Fig. 18.1
	Fig. 20.3
Parking Aid Sensors	Fig. 18.1
Parking Aid Sounders	Fig. 18.1
Parking Brake Switch	Fig. 07.1
Passenger Airbag Deactivated Indicator Lamp	Fig. 17.1
	Fig. 17.2

Passenger Junction Fusebox	Fig. 01.1
	Fig. 01.3
	Fig. 01.4
	Fig. 01.6
	Fig. 01.7
	Fig. 01.8
	Fig. 03.1
	Fig. 03.4
	Fig. 06.1
	Fig. 06.2
	Fig. 06.3
	Fig. 08.1
	Fig. 08.2
	Fig. 08.3
	Fig. 08.4
	Fig. 10.1
	Fig. 13.1
	Fig. 13.2
	Fig. 13.3
Passenger Junction Fusebox Ignition Relay	Fig. 01.6
Passenger Seat Belt Tension Sensor	Fig. 17.2
Passenger Seat Weight Pressure Sensor	Fig. 17.1
	Fig. 17.2
Passenger Seat Weight Sensing Module	Fig. 17.1
	Fig. 17.2
Passive Anti-Theft System Transceiver	Fig. 02.1
	Fig. 02.2
	Fig. 02.3
	Fig. 12.4
	Fig. 12.5
Power Amplifier	Fig. 15.2
	Fig. 20.4
Power Distribution Fusebox	Fig. 01.1
	Fig. 01.2
	Fig. 01.5
	Fig. 01.8
	Fig. 01.9
	Fig. 02.1
	Fig. 02.2
	Fig. 02.3
	Fig. 03.2
	Fig. 03.4
	Fig. 03.5
	Fig. 03.6
	Fig. 06.3
	Fig. 08.1
	Fig. 08.2
	Fig. 08.10
	Fig. 13.1
	Fig. 13.2
	Fig. 19.1
Power Distribution Fusebox Ignition Relay	Fig. 01.5
Powerwash Pump	Fig. 13.1
	Fig. 13.2
Powerwash Pump Relay	Fig. 13.1
	Fig. 13.2
<b>R</b>	
Rain Sensing Module	Fig. 13.2
Rain Sensor	Fig. 13.2
Restraints Control Module	
All Wheel Drive Vehicles	Fig. 07.1
	Fig. 07.2
	Fig. 17.2
	Fig. 20.3
Front Wheel Drive Vehicles	Fig. 07.1
	Fig. 07.2
	Fig. 17.1
	Fig. 20.3

Reverse Lamps Relay . . . . .	Fig. 08.3	Seat Module	
. . . . .	Fig. 08.4	Driver . . . . .	Fig. 06.3
Reverse Lamps Switch		. . . . .	Fig. 10.2
2.0 L, 2.5 L, 3.0 L . . . . .	Fig. 08.3	. . . . .	Fig. 11.1
. . . . .	Fig. 08.4	. . . . .	Fig. 11.6
Diesel . . . . .	Fig. 08.3	. . . . .	Fig. 20.1
. . . . .	Fig. 08.4	. . . . .	Fig. 20.2
RF Module . . . . .	Fig. 08.1	Passenger . . . . .	Fig. 11.2
. . . . .	Fig. 08.2	. . . . .	Fig. 11.6
. . . . .	Fig. 09.1	Seat Motor	
. . . . .	Fig. 12.1	LH . . . . .	Fig. 11.5
. . . . .	Fig. 12.2	RH . . . . .	Fig. 11.5
. . . . .	Fig. 12.3	Seat Motors and Position Sensors – Driver . . . . .	Fig. 11.1
. . . . .	Fig. 12.4	Seat Motors – Passenger . . . . .	Fig. 11.2
. . . . .	Fig. 12.5	Seat Movement Motors	
. . . . .	Fig. 14.1	LH . . . . .	Fig. 11.3
. . . . .	Fig. 14.2	. . . . .	Fig. 11.4
Roof Console		RH . . . . .	Fig. 11.3
Printed Circuit Board . . . . .	Fig. 09.1	. . . . .	Fig. 11.4
. . . . .	Fig. 09.2	Seat Position Switch	
. . . . .	Fig. 12.4	Driver . . . . .	Fig. 17.1
. . . . .	Fig. 12.5	. . . . .	Fig. 17.2
. . . . .	Fig. 14.2	Passenger . . . . .	Fig. 17.2
. . . . .	Fig. 16.1	Seat Switch Packs . . . . .	Fig. 11.3
. . . . .	Fig. 16.2	. . . . .	Fig. 11.4
. . . . .	Fig. 16.3	. . . . .	Fig. 11.5
. . . . .	Fig. 16.5	Security Indicator . . . . .	Fig. 12.4
. . . . .	Fig. 18.1	. . . . .	Fig. 12.5
. . . . .	Fig. 19.1	Security Sounders . . . . .	Fig. 12.4
. . . . .	Fig. 20.3	. . . . .	Fig. 12.5
Without Printed Circuit Board . . . . .	Fig. 09.1	Side Airbag Igniters . . . . .	Fig. 17.1
. . . . .	Fig. 12.4	. . . . .	Fig. 17.2
. . . . .	Fig. 12.5	Side Impact Sensors . . . . .	Fig. 17.1
. . . . .	Fig. 14.2	. . . . .	Fig. 17.2
. . . . .	Fig. 16.1	Side Marker Lamps	
. . . . .	Fig. 16.2	Front . . . . .	Fig. 08.1
. . . . .	Fig. 16.3	. . . . .	Fig. 08.2
. . . . .	Fig. 16.5	Rear . . . . .	Fig. 08.3
. . . . .	Fig. 20.3	. . . . .	Fig. 08.7
<b>S</b>		Slave Ignition Relay . . . . .	Fig. 01.5
Seat Back Heaters . . . . .	Fig. 11.6	Sliding Roof Module . . . . .	Fig. 14.2
. . . . .	Fig. 11.7	Solid State Relay . . . . .	Fig. 03.6
Seat Belt Buckle Pretensioner Igniters . . . . .	Fig. 17.1	Speed Control Module . . . . .	Fig. 03.4
. . . . .	Fig. 17.2	Speed Control Switches . . . . .	Fig. 03.2
Seat Belt Reel Pretensioner Igniters . . . . .	Fig. 17.2	. . . . .	Fig. 03.4
Seat Belt Switches . . . . .	Fig. 17.1	. . . . .	Fig. 03.6
. . . . .	Fig. 17.2	Starter Motor	
Seat Cushion Heaters . . . . .	Fig. 11.6	2.0 L, 2.5 L, 3.0 L . . . . .	Fig. 02.1
. . . . .	Fig. 11.7	. . . . .	Fig. 02.2
Seat Heater Modules . . . . .	Fig. 11.7	Diesel . . . . .	Fig. 02.3
Seat Heater Switches . . . . .	Fig. 09.2	Starter Relay . . . . .	Fig. 02.1
. . . . .	Fig. 11.6	. . . . .	Fig. 02.2
. . . . .	Fig. 11.7	. . . . .	Fig. 02.3
Seat Lumbar Pump		Steering Angle Sensor . . . . .	Fig. 05.3
Driver . . . . .	Fig. 11.1	. . . . .	Fig. 20.1
LH . . . . .	Fig. 11.3	. . . . .	Fig. 20.2
. . . . .	Fig. 11.4	Steering Wheel . . . . .	Fig. 09.2
Passenger . . . . .	Fig. 11.2	. . . . .	Fig. 16.2
RH . . . . .	Fig. 11.3	. . . . .	Fig. 16.3
. . . . .	Fig. 11.4	. . . . .	Fig. 19.1
		Sub Woofer	
		Estate (Wagon) . . . . .	Fig. 15.2
		Sedan . . . . .	Fig. 15.2

## T

Tail Gate Latch	Fig. 09.1
	Fig. 12.3
	Fig. 12.5
Tail Gate Release Switch	Fig. 12.3
Tail Glass Latch	Fig. 09.1
	Fig. 12.3
	Fig. 12.5
Tail Glass Release Switch	Fig. 12.3
Tail Lamp Units	Fig. 08.3
	Fig. 08.4
	Fig. 08.5
	Fig. 08.6
	Fig. 08.7
	Fig. 08.8
	Fig. 08.9
Telematics Display	Fig. 09.2
	Fig. 16.1
	Fig. 16.2
	Fig. 16.4
	Fig. 16.5
Telephone Antenna	
Estate (Wagon): AM / FM	Fig. 16.1
	Fig. 16.2
Sedan: Bumper	Fig. 16.1
	Fig. 16.2
Throttle Body	
2.5 L, 3.0 L	Fig. 03.1
Throttle Motor	Fig. 03.1
Throttle Motor Relay	Fig. 03.1
T-MAP Sensor	Fig. 03.5
TP Sensor	
2.0 L	Fig. 03.3
Traction Control Switch	Fig. 05.2
	Fig. 09.2
Trailer Towing Connector	Fig. 08.5
	Fig. 08.6
	Fig. 08.7
	Fig. 08.8
	Fig. 08.9
Trailer Towing Module	Fig. 08.5
	Fig. 08.6
	Fig. 08.7
	Fig. 08.8
	Fig. 08.9
Transit Isolation Relay	Fig. 01.1
Transmission Control Module	
16-Bit	Fig. 04.1
	Fig. 20.1
	Fig. 20.2
32-Bit	Fig. 04.2
	Fig. 20.1
	Fig. 20.2
Transmission Range Sensor	Fig. 02.1
	Fig. 02.2
	Fig. 04.1
	Fig. 04.2
Trunk Lamps	Fig. 09.1
Trunk Lock Motor	Fig. 09.1
	Fig. 12.1
	Fig. 12.2
	Fig. 12.4
Trunk Release Switch	Fig. 12.1
	Fig. 12.2
Turn Signal Repeaters – Front	Fig. 08.1
	Fig. 08.2

Turn Signal Switch	Fig. 07.1
	Fig. 08.1
	Fig. 08.2
	Fig. 08.3
	Fig. 08.4
TV Antennas and Amplifiers	Fig. 16.4
	Fig. 16.5
Tweeter Speakers	
Front	Fig. 15.1
	Fig. 15.2
Rear	Fig. 15.2

## V

Vacuum Module	Fig. 05.1
	Fig. 05.2
	Fig. 05.3
Vacuum Pump	Fig. 05.1
	Fig. 05.2
	Fig. 05.3
Vanity Mirror Lamps	Fig. 09.1
Vehicle Information Antenna and Amplifier	Fig. 16.5
Vehicle Information Control Module	Fig. 16.5
Vehicle Information Sensor	Fig. 16.5
Voice Activation Module	Fig. 16.2
	Fig. 16.3
	Fig. 20.4
VVT Solenoid Valves	Fig. 03.1
	Fig. 03.3

## W

Washer Fluid Level Switch	Fig. 07.1
Wheel Speed Sensors	Fig. 05.1
	Fig. 05.2
	Fig. 05.3
Window Motors	Fig. 14.1
Windshield Heater Relay	Fig. 06.3
Windshield Heaters	Fig. 06.3
Windshield Washer Pump	Fig. 13.1
	Fig. 13.2
	Fig. 13.3
Windshield Wiper Motor Relay	Fig. 13.1
	Fig. 13.2
Wiper Motor	
Front	Fig. 13.1
	Fig. 13.2
Rear	Fig. 13.3
Wiper Motor Relay – Rear	Fig. 13.3
Wiper Switch Assembly	Fig. 13.1
	Fig. 13.2
	Fig. 13.3

## Y

Yaw Rate Sensor	Fig. 05.3
	Fig. 20.1
	Fig. 20.2



