

Overhead Console (76.13.69)


Removal

- 1 . Detach the roof console.



- 2 . Remove the roof console.

▶ Disconnect the electrical connector(s).

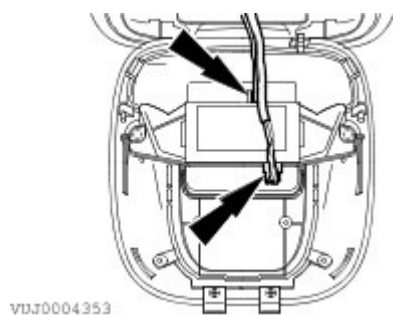

Installation

- 1 . To install, reverse the removal procedure.