


Published: Aug 10, 2005

Front Bumper Cover (76.22.78)

Removal

All vehicles

- 1 . Remove the radiator splash shield retaining bolts.

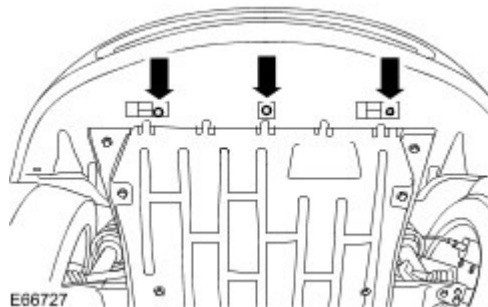


- 2 . **NOTE:**

Left-hand shown, right-hand similar.

Detach the wheel arch liner.




- 3 . Disconnect the bumper wiring harness electrical connector.

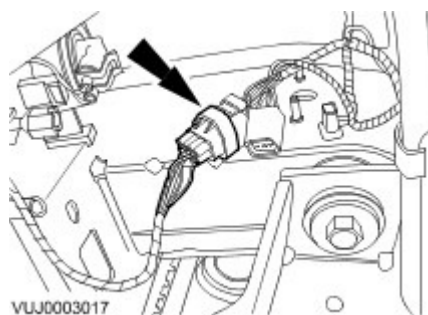

- 4 . **NOTE:**

Left-hand shown, right-hand similar.

Detach the bumper cover.

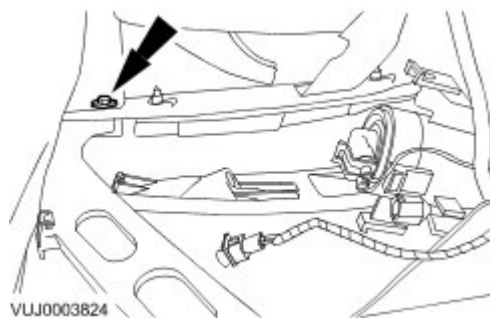


Vehicles with headlamp washers

5 . NOTE:

Left-hand shown, right-hand similar.


Apply suitable tape to the bumper cover to prevent damage to the bumper cover.

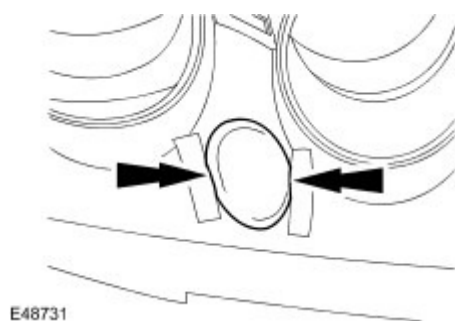

6 . NOTE:

Left-hand shown, right-hand similar.

Reposition the headlamp washers to the fully open position.

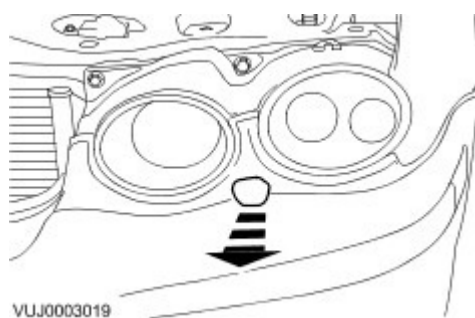

7 . NOTE:

Left-hand shown, right-hand similar.

Remove the headlamp washer cover.



All vehicles

8 . NOTE:

Left-hand shown, right-hand similar.

Detach the side of the bumper cover from the retaining clips.



9 .




CAUTION: Make sure the bumper cover is supported before removing the securing bolts.

NOTE:

Left-hand shown, right-hand similar.

Remove the bumper cover.


▶ Remove the bumper cover securing bolts.

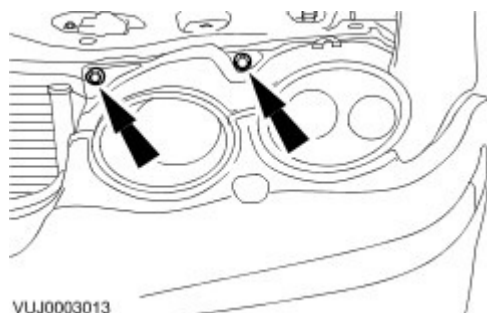

Installation

1 . To install, reverse the removal procedure.

▶ Tighten to 7 Nm.

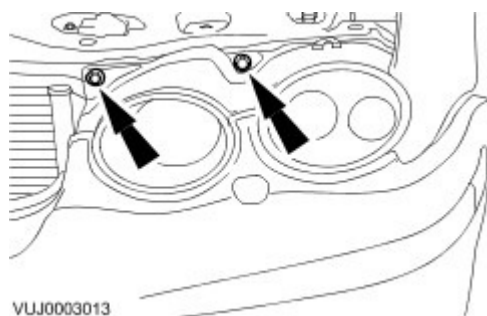

2 . Tighten to 7 Nm.

