


Rear Bumper Cover (76.22.77)

Removal

All Vehicles


- 1 . Raise and support the vehicle. For additional information, refer to <<100-02>>.
- 2 . Detach the rear wheel arch liner.

▶ Right-hand side shown, left-hand side similar.

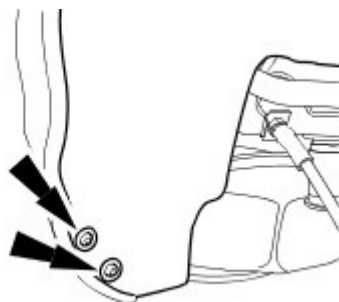


- 3 . Detach the side of the bumper cover.

▶ Right-hand side shown, left-hand side similar.

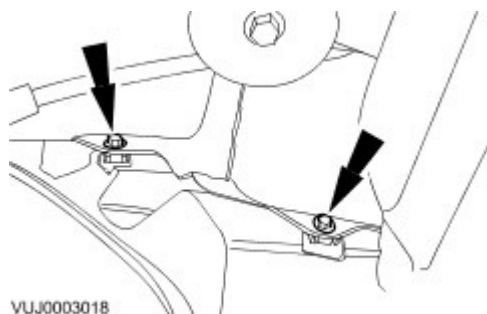


- 4 . Detach the boot liner.

▶ Right-hand side shown, left-hand side similar.

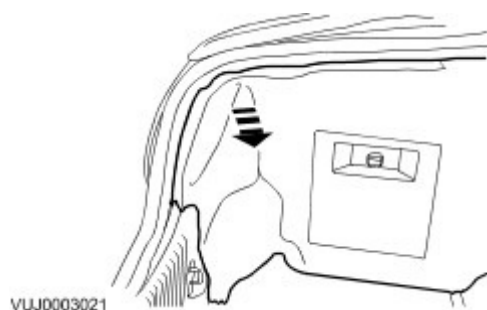


- 5 . Remove the luggage compartment rear trim panel.

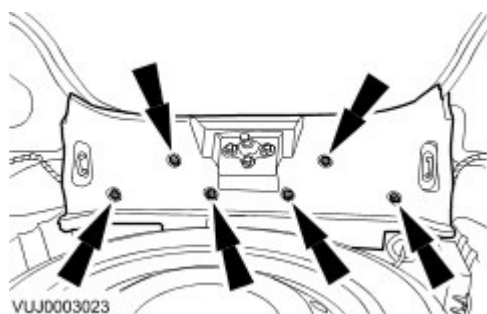

- 6 . Remove the spare wheel.


Vehicles with parking aid

- 7 . Disconnect the electrical connector.

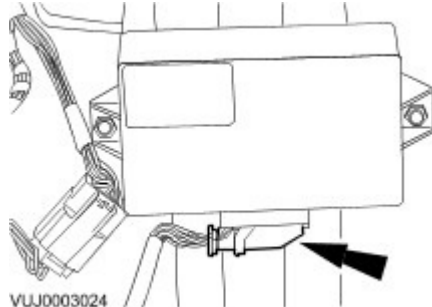


All vehicles


- 8 . Disconnect the electrical connector.

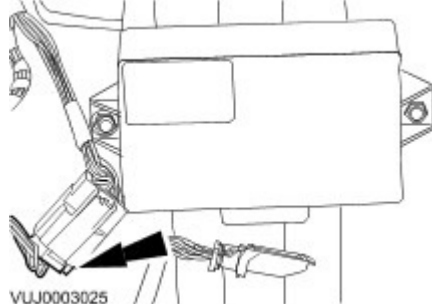


- 9 . Detach the grommet.

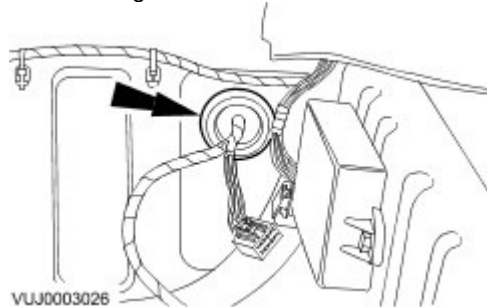

- 10 . Detach the side of the bumper cover.

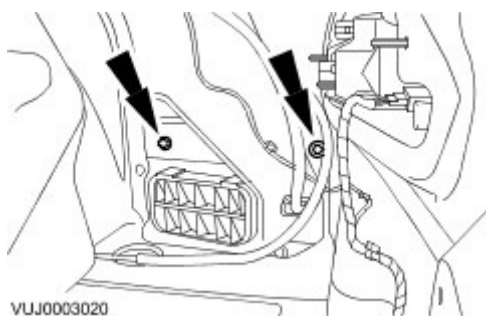

11 . Detach the side of the bumper cover.

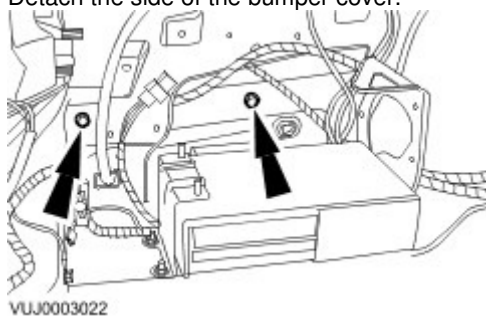


12 .




CAUTION: Make sure the bumper cover is supported before removing the securing nuts.

Remove the bumper cover securing nuts.

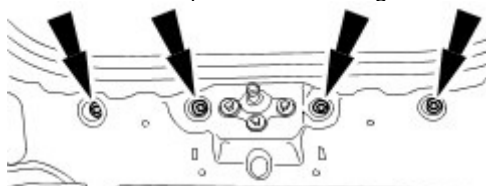


13 . Remove the bumper cover.

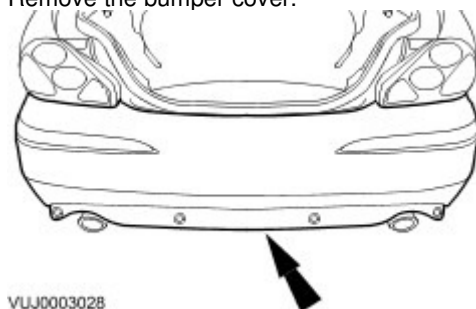

Installation

- 1 . To install, reverse the removal procedure.
- 2 . Tighten to 7 Nm.

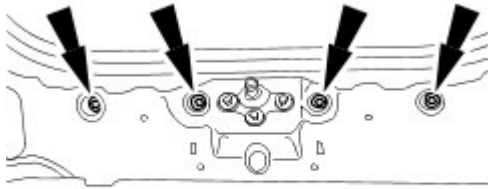


VUJ0003027

3 . Tighten to 7 Nm.




VUJ0003022

4 . Tighten to 7 Nm.

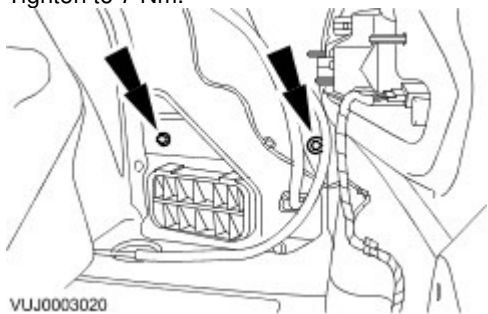

VUJ0003020

5 . Tighten to 7 Nm.

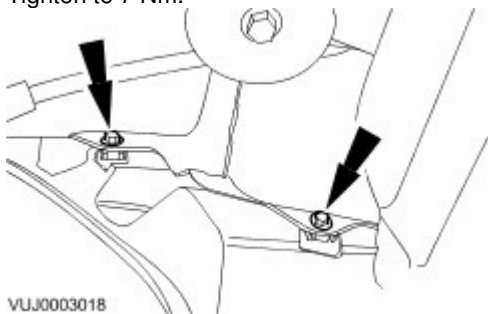

VUJ0003018